

# **B&B** Model 714 **ARMR** Cable Crash Beam Vehicle Barrier

## INSTALLATION MANUAL



### **B&B ARMR**

#### **Corporate Office & Technical Support:**

5900 S. Lake Forest Drive

Suite 230

McKinney, TX 75070

Phone: (800) 367-0387

Fax: (972) 385-9887

E-mail: [info@bb-armr.com](mailto:info@bb-armr.com)

[techsupport@bb-armr.com](mailto:techsupport@bb-armr.com)

<http://www.bb-armr.com/>

**MADE IN THE USA**

---

# INTRODUCTION

## **Welcome**

Congratulations on your purchase of a B&B ARMOR vehicle barrier. We have years of experience in all aspects of perimeter security and related disciplines, and our products are used throughout the world to control access and to protect people, equipment, and facilities. Your vehicle barrier is designed to give you years of smooth, trouble-free operation.

In addition to providing detailed operating instructions, this manual describes how to install, maintain, and troubleshoot your vehicle barrier. To make it easy to locate the information you need, we've included a detailed Table of Contents immediately following this Introduction. All of this is important information, so be sure to keep the manual available for reference.

If you need help with any aspect of your vehicle barrier's installation or operation, please contact us. We offer a broad range of vehicle barrier and related security services, so you can also call on us for:

- Turnkey installations
- Routine barrier preventative maintenance or emergency repairs (including work on non-B&B ARMOR products)
- Spare or replacement parts
- Custom designs or special installations
- Equipment upgrades (modernize your old equipment with state-of-the-art hydraulics and control systems)
- Ancillary security equipment (such as security guard enclosures, card readers, security lighting, and so on)

## **Safety**

Your safety is important to us. If you have any questions or are in doubt about any aspect of the equipment, please contact us. While B&B ARMOR does not assume responsibility for injury to persons or property during installation, operation, or maintenance, we can provide verbal guidance, additional written instructions, or the services of a factory engineer. We're here to help you operate your vehicle barrier safely and effectively.

---

As the user, you are responsible for correct and safe installation, operation, and maintenance of this equipment. Users must follow the specific instructions and safety precautions located in this manual. In addition they must:

- Be aware of and follow the safety standards of the Occupational Safety and Health Administration (OSHA), as well as other applicable federal, state, and local safety regulations and industry standards and procedures. For installation outside the United States, users must also follow applicable international, regional, and local safety standards.
- Engage only experienced staff, properly trained, to install, operate, and maintain the equipment.
- Ensure that all repairs are performed correctly, using properly trained staff and the right tools and equipment.

## **Warranty**

B&B ARMR vehicle barriers are guaranteed against defects in materials and workmanship for one year. The warranty applies when the barrier is installed, operated, and maintained according to the instructions in this manual, and when it is operated within the service conditions for which it was specifically sold. The user must prevent potentially damaging conditions, such as mechanical overloading or unauthorized modifications. In the event of a malfunction during the warranty period, contact B&B ARMR and we will pursue prompt corrective action.

*This is a warranty summary only. The specific warranty supplied with your equipment is the governing document.*

## **How To Contact Us**

If you have any questions or experience any problems with your vehicle barrier, or if we can help you with any other facility security issues, please contact us:

**Corporate/Tech Support:**  
**B&B ARMR**  
5900 S. Lake Forest Drive, Suite 230  
McKinney, TX 75070 USA  
Telephone: (972) 385-7899  
Toll Free: (800) 367-0387  
Fax: (972) 385-9887  
**E-mail: [info@bb-armr.com](mailto:info@bb-armr.com)**  
**[techsupport@bb-armr.com](mailto:techsupport@bb-armr.com)**

# Table of Contents

**INTRODUCTION.....ii**

*Welcome..... ii*

*Safety..... ii*

*Warranty..... iii*

*How To Contact Us..... iii*

**1. ORIENTATION ..... 3**

*1.1 Overview ..... 3*

*1.2 Options ..... 5*

*1.3 Specifications ..... 5*

**2. INSTALLATION ..... 6**

*2.1 Introduction..... 6*

*2.2 Preliminary Considerations ..... 6*

*2.3 Installing the Hinge and Receiver Posts ..... 6*

*2.4 Emplacement..... 7*

*2.5 Final Installation Steps ..... 7*

**5. TROUBLESHOOTING ..... 8**

## 1. ORIENTATION

### 1.1 Overview

The formal name for this vehicle barrier—illustrated on the cover of this manual—is the *B&B ARMR Model 714 Cable Crash Beam*. It is a beam-type barrier hinged at one side so that the beam can be raised and lowered to restrict and control vehicle access. The beam is reinforced with an interior steel cable, which significantly increases the barrier's vehicle stopping power (see specifications below).

#### 1.1.1 Beam

The beam is a rectangular aluminum extrusion. The beam retains its mill aluminum finish and is marked with red and white safety tape. The steel cable is contained inside the beam and


anchored with two stainless steel rods at either end. These rods hold the cable during vehicle impact. The cable and its anchor rods substantially increase the barrier's stopping power compared to a beam barrier without these components. The impact energy is absorbed first by stretching the cable, then the energy is transferred to the foundation through the hinge and receiver assemblies.

### 1.1.2 Posts

The hinge and receiver posts are steel. The hinge post operates with internal bearings on a stainless steel axle that allows the beam to move in an arc of 85°-87°. The receiver post has a stanchion constructed of two steel weldments. The weldments direct and capture the beam when it is lowered, and securely contain the beam during a vehicle impact. The receiver post has a security latching pin that can be padlocked to prevent unauthorized operation when the barrier is unattended (see Figure 1-1 below).

The barrier has a self-contained, exterior-mounted, automatic damping device. When the barrier operates at the design speed, this damper reduces any whipping action by the beam as it comes to the full, raised position.

**Figure 1-1: Receiver Post Stanchion and Security Latching Pin**

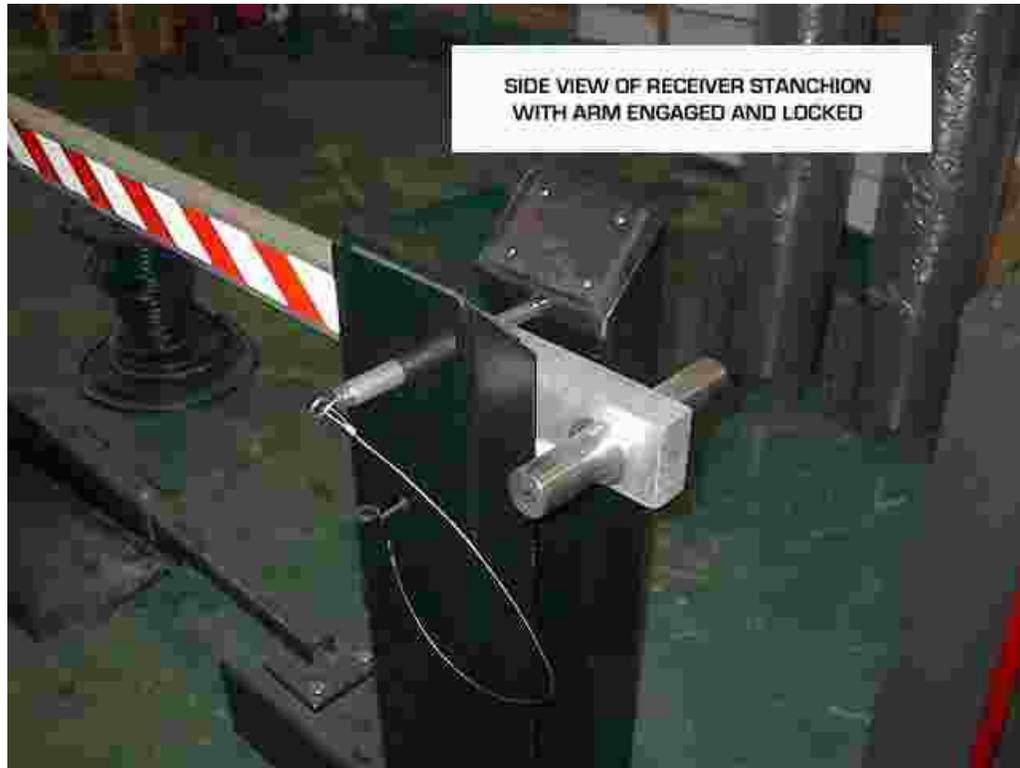

Both the hinge post and receiver post are cast in place in a subterranean concrete pour. Both posts have elevation grade locators to aid the installation. The installation requires no above-grade concrete. The portions of the hinge and receiver posts that are imbedded are coated to prevent deterioration due to cement contact. The aboveground portions of the posts are primed and finish painted in black.

## 1.2 Options

The *B&B ARMR Model 714 Cable Crash Beam* is available with the following options. Consult your purchase order or other ordering documentation to determine whether your unit has the optional equipment.

- Manually operated hydraulic unit with handwheel
- Traffic lights (red and amber stop/go lights to signal the vehicle)
- Steel crash arm

## 1.3 Specifications

Key specifications for the *B&B ARMR Model 714 Cable Crash Beam* are as follows.

- Meets or exceeds US Navy Specification OR098-09-88
- Certified vehicle-stopping power is 10,000 pounds at 18 mph.

## 2. INSTALLATION

### 2.1 Introduction

We designed the Model 714 for quick and easy installation. However, every site is different and each Model 714 will vary due to the choice of options or special design features. Accordingly, the instructions below may have to be varied slightly for your particular installation. If you need help, or are unclear about any of these instructions, please contact B&B ARMR for assistance.



**Your safety is extremely important to us. Be sure to follow the specific instructions presented below. You are responsible for the correct and safe installation, operation, and maintenance of this equipment.**

### 2.2 Preliminary Considerations

Before beginning site excavation and barrier installation, note the following important considerations.

- Inspect the site and verify there are no underground utilities or overhead wires or obstructions in the excavation area.
- If possible, locate the installation away from routine foot traffic to reduce the chance for pedestrian injury from the barrier's moving arm.

### 2.3 Installing the Hinge and Receiver Posts

Perform the following steps.

- 2.3.1 Excavate the hole for the hinge post as shown in the engineering drawing titled *Model 714 General Layout* (see the Engineering Drawings section at the end of this manual). Place supporting timbers over the excavation and parallel to the roadway. Place the hinge post in the excavation supported by these timbers, using the grade locators on the post to ensure the hinge post is set to the proper depth. There are 3/8" nuts welded to the grade locators. Insert all-thread in these nuts and through the supporting timbers and use the all-thread to adjust the hinge post so it is plumb and level.

- 2.3.2 Place string lines on either side of the hinge post and run the lines across the roadway to determine the receiver post's location. Keep the string lines parallel and accurately measure the *clear opening length*. This length (see *Model 714 General Layout* drawing) is the distance between the inside (side facing the road) faces of the hinge post and the receiver post. Once the receiver post location is determined, excavate the receiver post's hole and position and plumb the receiver post as described above.
- 2.3.3 Verify the posts are positioned correctly by running a string line between the two. Pull the string from the center of the hinge post and perpendicular to the axle and verify it falls directly on the center of the receiver post, and the distance between the two is exactly the specified clear opening length for your barrier.

## 2.4 Emplacement

- 2.4.1 Fill the hinge post and receiver post excavations with concrete and finish the concrete surface. Remove any splattered concrete from the posts. Verify the posts did not move out of alignment during the pour by repeating step 2.3.3 above. Allow the concrete to cure.
- 2.4.2 Pour the pad for the hydraulic unit, and finish the concrete surface. Remove any concrete that might have splattered inside the exposed conduits. Allow the concrete to cure.

## 2.5 Final Installation Steps

- 2.5.1 Attach the beam to the hinge post using the stainless steel axle, sliding the axle through the flange-mounted bearing, through the bronze bushing on the beam, and into the second bearing. Use the setscrews on the bearings to lock the axle in place. In addition, there are shaft collars on either side of the beam. Tighten these collars to lock the beam in place.

## 5. TROUBLESHOOTING

The table below provides guidance on identifying and correcting any problems with your *B&B ARMR Model 714 Cable Crash Beam* vehicle barrier. If you encounter problems that you cannot fix, contact B&B ARMR and we will gladly work with you to correct them.

### Model 714 Troubleshooting Guide

Symptom	Actions
Beam arm whips excessively	1. Check that dampening piston works and is adjusted properly
Beam arm makes noise	1. Check that bearings are greased 2. Check that beam arm is not moving too fast
Beam arm strikes receiver post	1. Check that strike pads are present 2. Check that hinge and receiver post are aligned correctly